

Crease and Board Stiffness



**MODEL
79-11**

Measuring Crease and Stiffness

This user friendly instrument measures the stiffness at 50mm and 15 degrees and the crease line at 10mm and 90 degrees. Both stiffness and spring back can be measured. A spring loaded clamp secures the sample. The clamp is manually rotated towards the fixed position. During a test, the continuous force value is displayed. When the test time of 15 seconds is completed, the maximum force is displayed. The instrument can be supplied with square clamps and/or round cornered clamps (Philip Morris method).

Test results

The relationship between board stiffness and crease recovery is an important factor in the performance of cartons on packaging machines or manual packing. With the results of the Crease and Board Stiffness tester the perfect characteristics can be measured and maintained.

Features

- Spring loaded clamp
- Easy to use
- Measures 15 degrees at 50mm
- Measures 90 degrees at 10mm
- Export option to GraphMaster software
- Available with square clamps and/or Round cornered clamps (PM method)
- 15 second measurement delay (BS 6965:1)
- Calibration weights included
- Cutter included

International Standards

- BS 6965:1
- BS 3748
- PMI 068
- BS ISO 2493-1
- TAPPI T 556 (15 degrees only)
- Scan P29

Is your required standard not here? Ask us



**Taking care
of quality**



Clamp distance and degrees

The left clamp is fixed at a 50mm distance and rotates 15 degrees. The right clamp turns 90 degrees on 10mm. For Crease line, bending resistance and spring back.



Clamp structure

The sample is clamped with a strong spring loaded clamp. Opening and closing the clamp is done by turning the screw. The maximum sample thickness is 4mm.



Spring Back

When the clamp is turned to the maximum degree, the instrument continues reading the value. After 15 seconds the spring back force is given.




Cutter

To help cut accurate sample specimens a cutter for crease and Board Stiffness is included. Quick and easy cutting for reliable results.



Easy to use

With only one button the Crease and Board Stiffness tester is very easy to use. The zero button is only used when the zero drifts of.

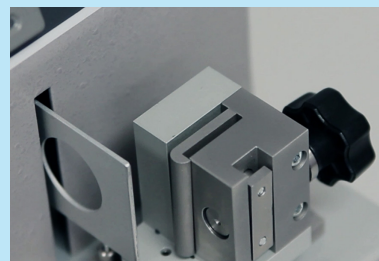

Special Philip Morris clamp

The clamps are easily interchangeable. In addition to square clamps also round cornered clamps are available according to the Philip Morris standard.

Specifications

Model:	79-11
Measuring units:	gram force
Load cell range:	0-399 gf
Resolution:	1 gram
Accuracy:	+/-1 gram
Sample thickness:	maximum 4mm

Including cutter

Including calibration weight (296 grams)

Installation requirements

Electrical:	110 V/60 Hz or 220V/50 Hz
Air:	not required
Weight:	6.5 kg (14 lbs)
Dimension:	20.5 x 27 x 21cm (8.1 x 10.6 x 8.3 inch)

Output

RS 232.

Optional/ accessories

Graph Master Software
Philip Morris Clamp